



Head office: 38 Redfern St Wetherill Park NSW 2164

Australia


Ph: 1300 132 389 Fax: 1300 652 292 sales@doric.com.au www.doric.com.au




## **INSTALLATION GUIDE**

# APPLICABLE HANDLE COVERS

These instructions apply with the entire Advant Range of interior handle covers.

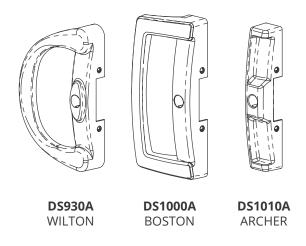


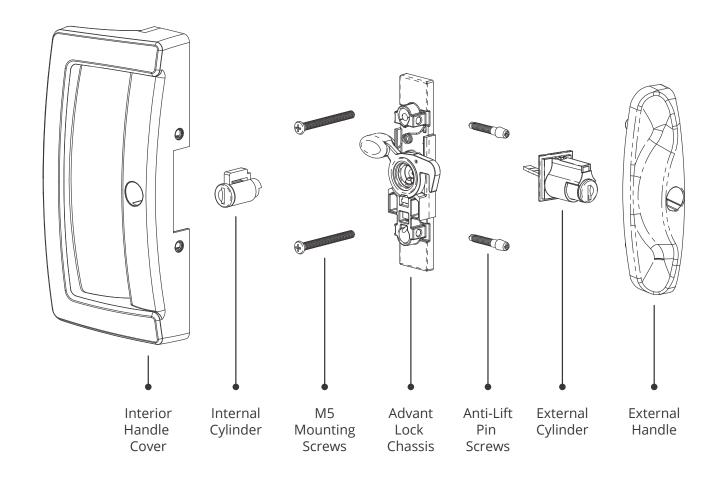

## **INSTALLATION GUIDE**


#### **Machining Details**

To suit Surface Mounted Patio Door Locks with spigotted base and Adjustable Strike

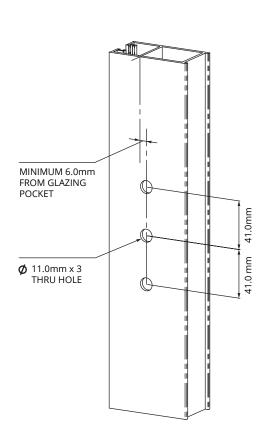


- **1.** Assemble external cylinder in exterior pull. This lock uses wafer or pin cylinders.
- **2.** Place the external handle & cylinder on the door stile so that the cylinder tail protrudes through centre hole

NOTE: External handle curved surface is the grip location.

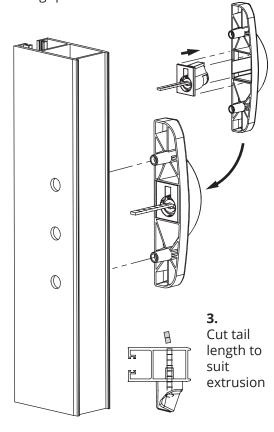


**3.** Place lock on inside of stile, aligning the centre holes for exterior cylinder tail to locate into interior cam. Fasten with 2 x M5 screws.

NOTE: Tongue faces the door jamb.

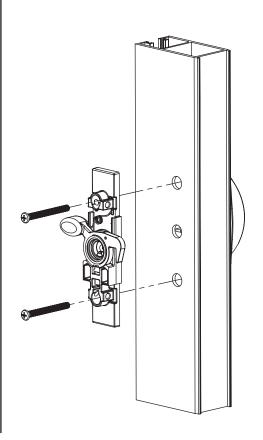

**4.** Ensure by cycling the external cylinder with key, that the internal lever operates smoothly.

NOTE: If the lock is tight or grinding, unassemble lock from extrusion & trim cylinder tail slightly.

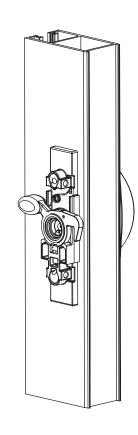







## **INSTALLATION GUIDE**

**5.** Slot the internal cylinder into place on the inside of the handle cover.

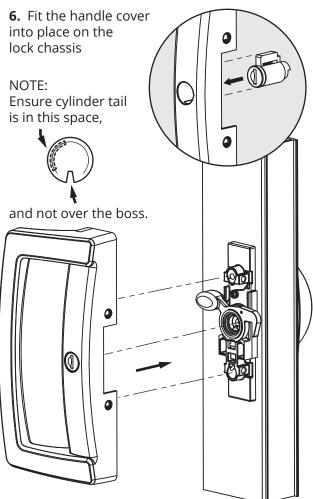

**7.** Fasten the handle cover on internal lock chassis with 2 x Anti-lift Pin screws. Do not over tighten.

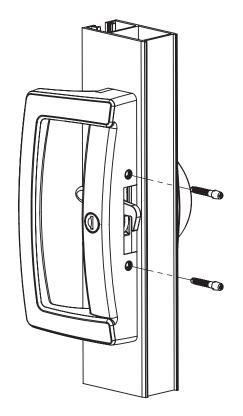

**8.** With the handle assembly complete, cycle test the lever and both interior & exterior cylinders to ensure they function correctly including inserting, operating and removing key.

#### **Keeper Installation**

For installation details for the DS5010/DS5011 Sliding Door Keepers, please refer to: doric.com.au/product/ds5010-sliding-door-keeper



**9.** Once keeper is on the door jamb, test to see if tongue engages the properly without issues.

If tongue does not engage, adjust the vertical and horizontal adjustments.

Keep the strike and lock parallel.

