
## dp DORIC

## DC223 Pneumatic Door Closer Installation Instructions



- 1) Ensure door opens and closes freely.
- 2) Fix Jamb Bracket to Hinge Jamb (See Fig.1) using fixing screws provided.
- 3) Prior to inserting Connecting Pin into Jamb Bracket, make sure the closer is in a hold open position (See Fig.2 & Fig.3). This will give proper tension setting for closer.
- 4) Close door and align end of Closer Body to give appropriate position for fixing Door Bracket (See Fig.4). Mark screw holes and fix Door Bracket to Top Door Rail.
- 5) Connect the closer to Door Bracket.
- 6) Release Hold Open Washer and move it to it's normal operating position behind the Lugs (See Fig.5).
- 7) Adjust closing speed by turning screw at end of Closer Body (See Fig.6)

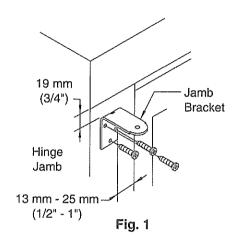